



Surfsight AI-12 Camera Installation Guide



Choose your installation method

Option A - Install with T-NULL Harness & Surfsight Power Adapter (Recommended)

Resources:

- a. [Geotab GO Device, Surfsight AI-12 & Camera Installation Walkthrough](#)
- b. [HRN-TNULL Installation Video](#)
- c. [HRN-TNULL Installation Guide](#)

* If you do not have any of these parts, please reach out to your T-Mobile Sales Rep


Option B - Install with two-wired installation kit (professional installation recommended)

Resources:


- a. [Hard Wired Installation Video](#)
- b. [Instructions: Hardwire The Dashcam To The Vehicle Fuse Box](#)
- c. [Hard Wired Installation Guide](#)

Pair your camera to the corresponding Go Device in the same vehicle:


For Geotab T-Mobile customers:

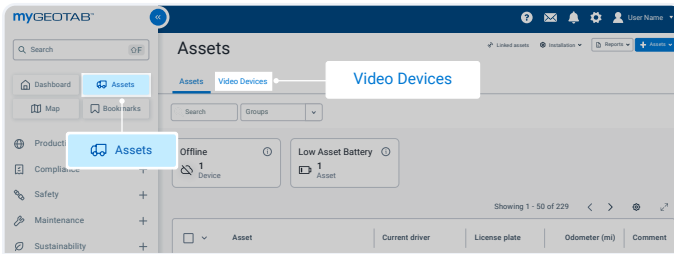


1. Navigate to the Asset tab. At the top, click on Video Devices

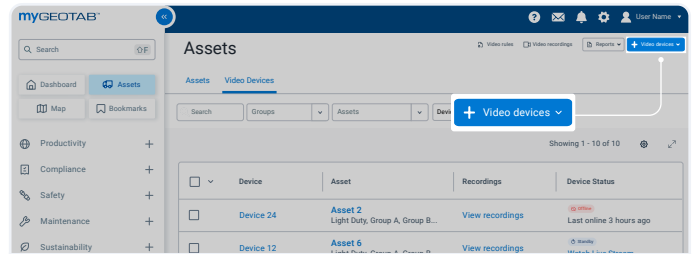


2. In the Top right corner, click on Video Devices, single device

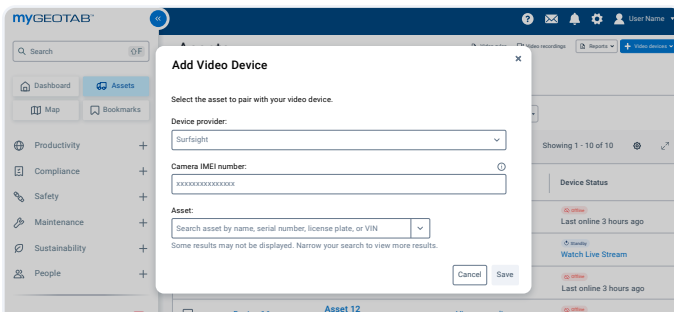


3. A box will appear for you to input the cameras IMEI and select the asset in which the camera will be paired with.

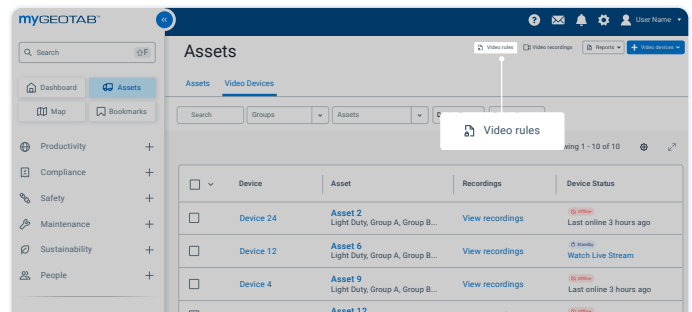


4. Click on Video Rules to turn on camera rules and create notifications.

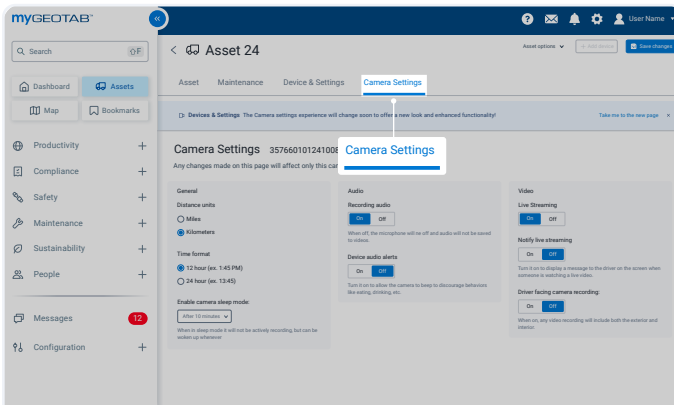


5. To turn on Audio and Adjust Camera settings, click on the Camera & Settings tab of the asset.

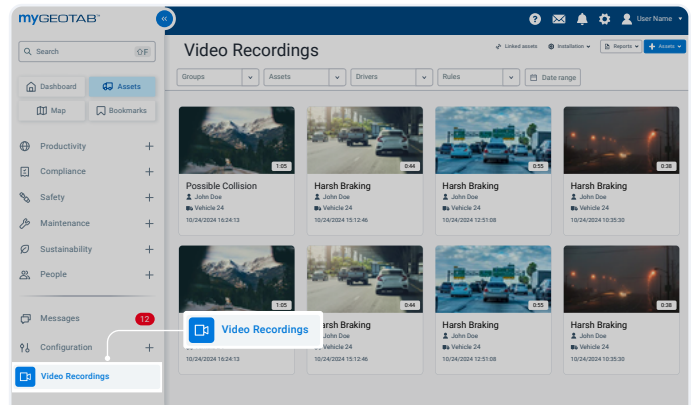


6. To access videos, see the Video Recording Page

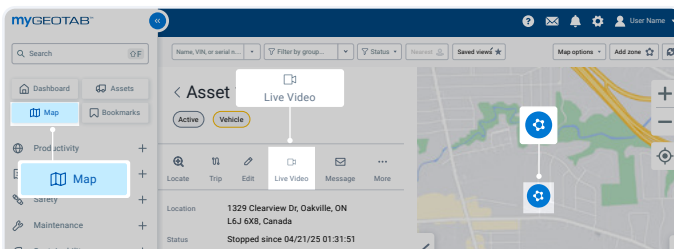

7. To access live view, go to the map and click on a vehicle. Click live video.

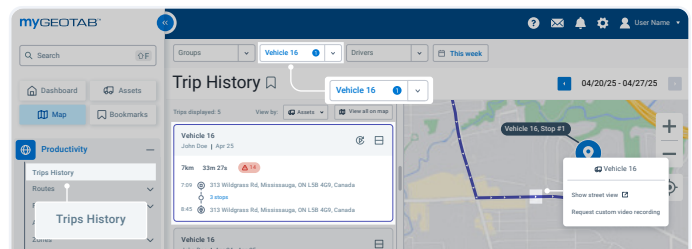

8. To pull custom video outside of exemptions, navigate to the vehicle's trip history, click on a point along the route and click request custom video recording.

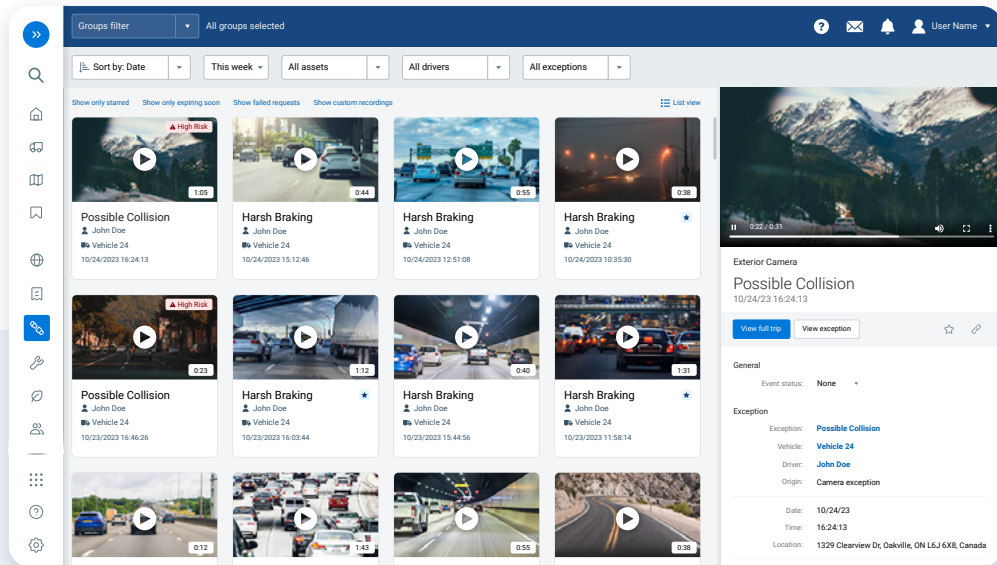

Surfsight AI-12 User Guide is here: [Surfsight AI-12 User Guide](#)